

WARN Industrial Hoist

| Model | Part Number | Motor Type |
|--------|-------------|---|
| DC2500 | 85161 | DC Electric 24 Volt Permanent Magnet |



The DC2500 hoist combines a powerful permanent magnet DC motor with robust sealing and our proven 3-stage all metal geartrain. Permanent grease lubrication means years of trouble free service. All WARN hoists incorporate an automatic mechanical brake that holds full rated load. The durable powder coated finish stands up to the elements and looks great. The DC2500 hoist is built on WARN's robust large frame design with a cast alumunum drum to provide plenty of wire rope capacity. Controls and accessories available separately.

Accessories

| Description: | Part Number |
|---|-------------|
| Control Pack-24V | 63752 |
| Contactor Only-24V (Standard bracket) | 34968 |
| Contactor Only-24V (w/ bracket for cover) | 34974 |
| Contactor Cover (with remote plug) | 36648 |
| Contactor Cover (no plug) | 35169 |
| Remote Control Only | 88528 |

| Engineering Data | | | | | |
|---|----------------|-------------|--|--|--|
| Rated Capacity: | 2500 lbf | 1134 kgf | | | |
| Drum Barrel Diameter: | 5.3 in | 135 mm | | | |
| Drum Flange Diameter: | 8.9 in | 226 mm | | | |
| Distance Between Flanges: | 4.7 in | 119 mm | | | |
| Recommended Maximum Wire Rope Diameter: | 5/16 in | 7.9 mm | | | |
| Recommended Minimum Wire Rope Breaking Strength: | 9800 lbf | 4445 kgf | | | |
| Approximate Shipping Weight: | 75 lb | 34 kg | | | |
| Duty Cycle (intermittent per SAE J706 section 6.2): | N/A ft | N/A m | | | |
| Mounting Bolt Torque: | 35 - 40 ft*lbf | 47 - 54 N*m | | | |
| Maximum Layers of Wire Rope: | 4 | | | | |
| Gear Reduction: | 315:1 | | | | |
| Brake Type: | Automatic Cone | | | | |
| Contactor/Remote Type: | Not Inc | cluded | | | |

Viewed from Motor End

Drum Rotation

Standards Compliance

- 1. CE Machinery Directive 98/37/EC and
- 2006/42/EC
 CE Electromagnetic Compatibility 2004/108/EC
- ASME B30.5

16.0

12.0

| Porformance | Ry I | 2VAr |
|-------------|------|------|

| Performance By Layer | | | | | L | | | |
|----------------------|----------|------|------|------------|----------|--------|----------|---|
| Drum Layer | Line Loa | id * | | No Load Li | ne Speed | Drum (| Capacity | ĺ |
| Diulii Layei | lbf | kgf | kN | ft/min | m/min | ft | m | 3 |
| 1 | 2500 | 1134 | 11.1 | 14.7 | 4.5 | 20 | 6.1 | 1 |
| 2 | 2250 | 1021 | 10.0 | 16.4 | 5.0 | 42 | 12.8 | 7 |
| 3 | 2045 | 928 | 9.1 | 18.0 | 5.5 | 66 | 20.1 | 3 |
| 4 | 1875 | 850 | 8.3 | 19.6 | 6.0 | 92 | 28.0 | |
| | | | | | | | |] |

Never exceed the Rated Capacity. Installation of a Rated Capacity Limiter is recommended.

Line Speed (ft/min 8.0 4.0 0.0 500 1000 1500 2000 2500 Line Load (lbf)

First Layer Performance

| Line I | Load | Current Draw | Line S | peed | Duty Cycle | |
|--------|------|--------------|--------|-------|------------|-----|
| lbf | kgf | Amps | ft/min | m/min | min/10min | 1 : |
| 0 | 0 | 9 | 14.7 | 4.5 | Continuous | 7 |
| 500 | 227 | 18 | 14.3 | 4.4 | Continuous | |
| 1000 | 454 | 28 | 13.8 | 4.2 | 9.5 | 7 |
| 1500 | 680 | 39 | 13.3 | 4.1 | 5.5 | 7 |
| 2000 | 907 | 50 | 12.8 | 3.9 | 3.8 | 1 |
| 2500 | 1134 | 61 | 12.5 | 3.8 | 2.9 | |
| | | | | | | |

75 Current Draw (A) 50 25 500 1000 1500 2000 2500 Line Load (lbf)

WARN INDUSTRIES, INC **Industrial Products**


Customer Service (North America): 1.800.543.9276 Customer Service (International): 1.503.722.3008 FAX: 1.503.722.3000 www.warn.com

12900 S.E. Capps Road, Clackamas, OR USA 97015



WARN Industrial Hoist

| Model | Part Number | Motor Type |
|--------|-------------|---|
| DC2500 | 85161 | DC Electric 24 Volt Permanent Magnet |

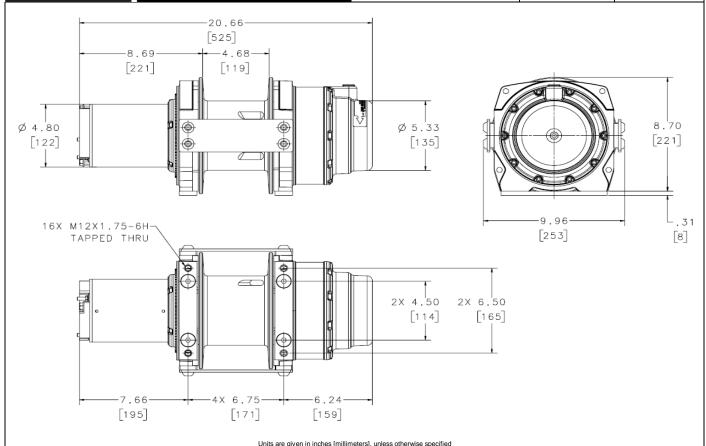

| | Units are given in inches [millimeters], unless otherwise specified | | | | |
|-------------------------------|---|----------------------------------|---|--|--|
| Recommended Moun | ting (Always Observe Correc | Electrical System Specifications | | | |
| Pull from bottom of hoist | Pull from bottom of hoist | Pull from top of hoist | See Electrical Cable Gauge Size Chart for cable sizing | | |
| | | | All electrical connections must be clean and tight | | |
| | | | | | |
| | | | Electrical System Wiring Schematic | | |
| | — | | Hoist provided without electrical controls. See accessories on front page for control kits. | | |
| | ••• | • | Power IN (Hoisting)- Connect motor terminal #2 to positive. Connect motor terminal #1 to negative (Ground). | | |
| Feet down | Feet forward | Feet forward | Power OUT (Lowering)- Connect motor terminal #1 to positive. Connect motor terminal #2 to negative (Ground). | | |
| Pull from top of hoist | Pull from top of hoist | Pull from top of hoist | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | toror — toror | Notes: | | |
| Feet down without angle brace | Feet down with angle brace | Angle Braces Only | | | |

WARN INDUSTRIES, INC Industrial Products

Customer Service (North America): 1.800.543.9276 Customer Service (International): 1.503.722.3008 FAX: 1.503.722.3000 www.warn.com

12900 S.E. Capps Road, Clackamas, OR USA 97015